


Care of the infectious patient needing oxygen or advanced airway management

COVID-19 Pandemic Response
Seattle and King County EMS
March 2020


Nasal Cannula

1. Place Nasal Cannula
2. Place Surgical Mask over the face
3. Titrate oxygen flow rate from 2-6 LPM

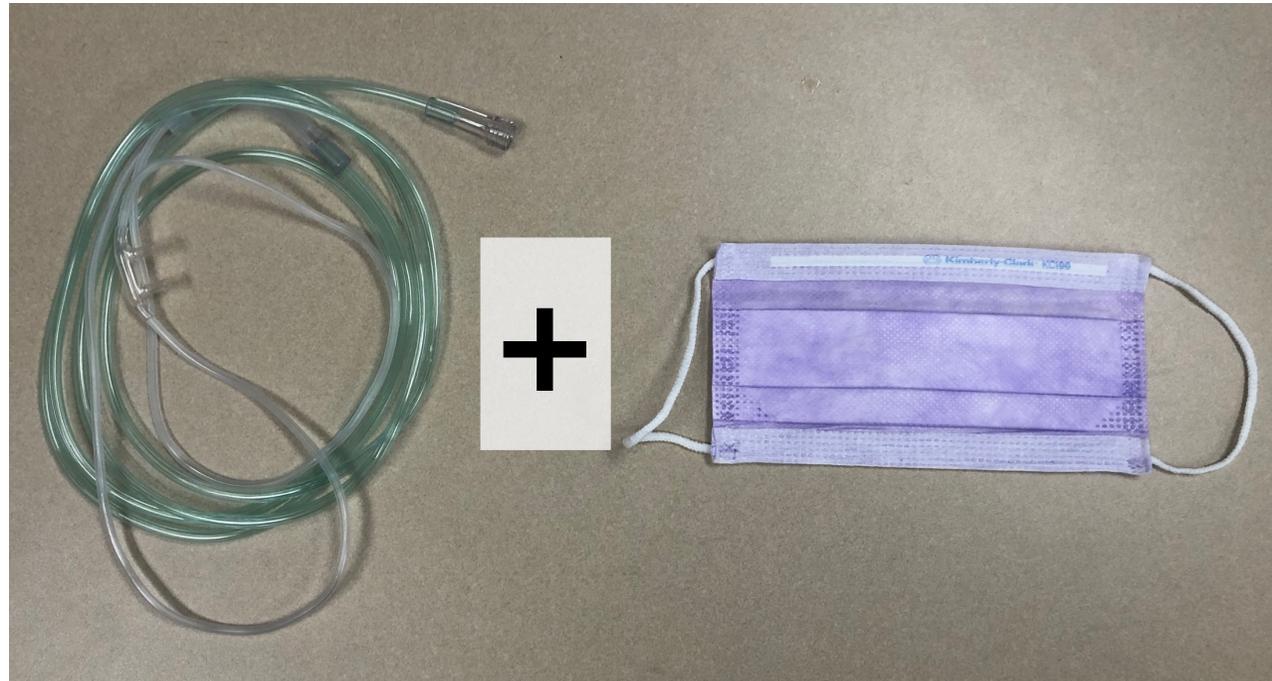


Non-Rebreather

1. Place non-rebreather mask
2. Place Surgical Mask over the face
3. Titrate oxygen flow rate from 6-15 LPM

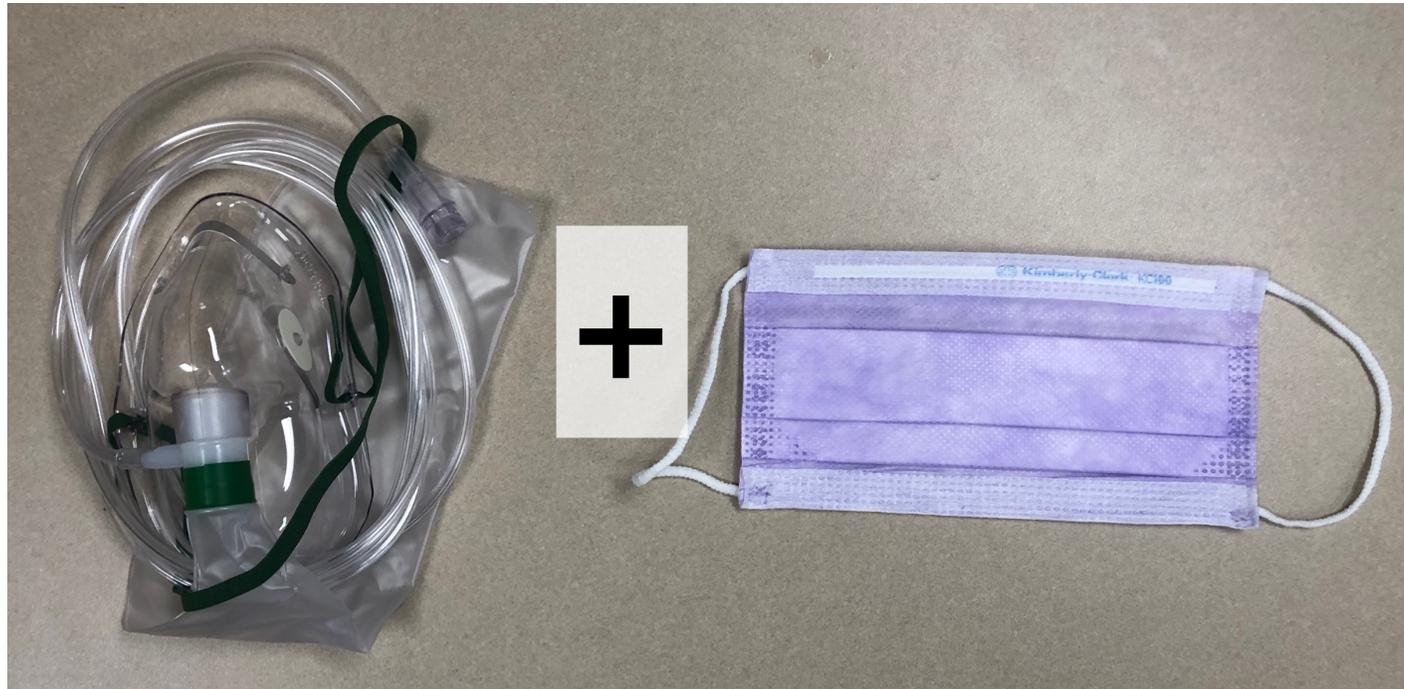

BVM

1. Place Filter between bag and mask
2. Ensure and maintain seal
3. Titrate oxygen flow rate to patient needs

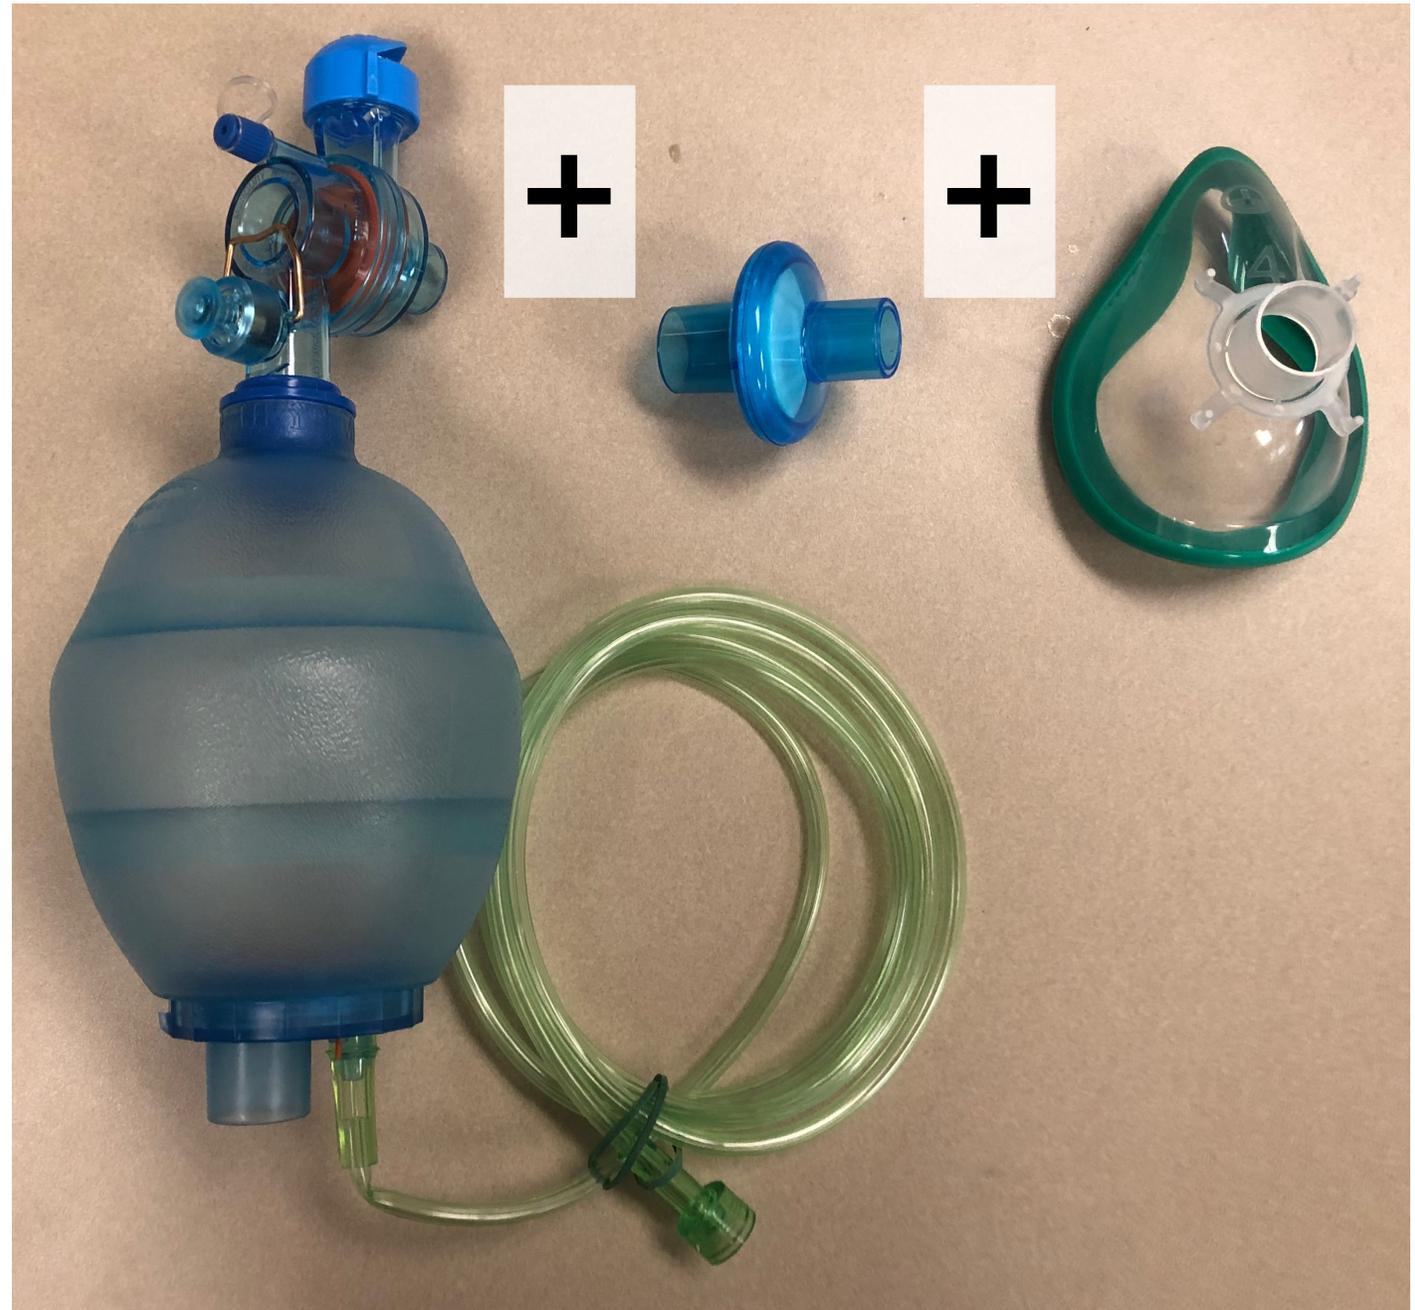

IGel

1. Place ETCO2 and then Filter onto bag
2. Ensure IGel is seated appropriately

